



PC-3 Gel Endcap Installation Instructions

- Using the 3M567 Connectors, connect the main feed to the individual panel as illustrated below.

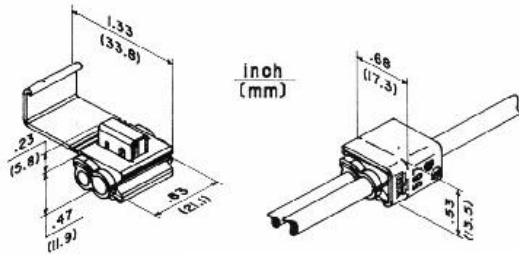

INSTRUCTIONS
Use only with insulated wire. Do not strip insulation.

- Slip circuit (run) wire into side slot. Insert the wire up to stop making sure the wire is visible in the window.
- Make connection with 9" electrician's (lineman's) pliers, by driving "U" contact down flush with top of connector.
- Close hinged cover until it locks.

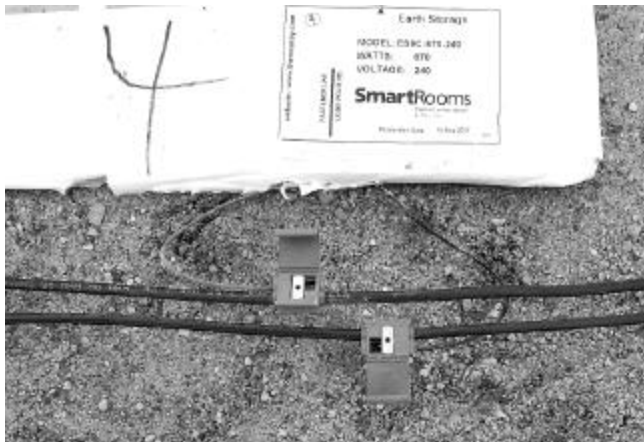

- Open the hinged closure being careful not to contaminate gel surfaces. Place the feed wire and 3M connections into the gel Endcap.



NOTE: All wires (supply and cold leads) must be inserted at the ends of the gel cap.

- Compress the gel closure over the 3M connectors making sure that both locking snaps are engaged. Inspect the Endcap. A properly installed enclosure will have both snaps securely locked. Gel will be visible at both ends of the enclosure.
- Fasten the strap on the PC-3 Endcap using the screw provided making sure to install the drywall screw in the correct fastening position as shown on the panel label.

